

JUST ADD WATER



20 kg

# RAPID SET CONCRETE

HARDENS IN 15 MINUTES

No mixing required, just add clean water  
Approx 2 x 20kg bags per post hole  
Great for small jobs  
Convenient & easy to use

**MADE**  
*Right Here*

**CEMENT  
AUSTRALIA**<sup>®</sup>



plus other non-structural applications

# RAPID SET CONCRETE


- ✓ Will harden in 15 minutes when used as directed, within desired temperature range
- ✓ Reduces required job time
- ✓ Helps when job site accessibility is an issue
- ✓ Convenient & easy to use

Build with Confidence

[cementaustralia.com.au](http://cementaustralia.com.au) or call 1300 CEMENT (1300 236 368)

**MADE**  
*Right Here*

**CEMENT  
AUSTRALIA**<sup>®</sup>

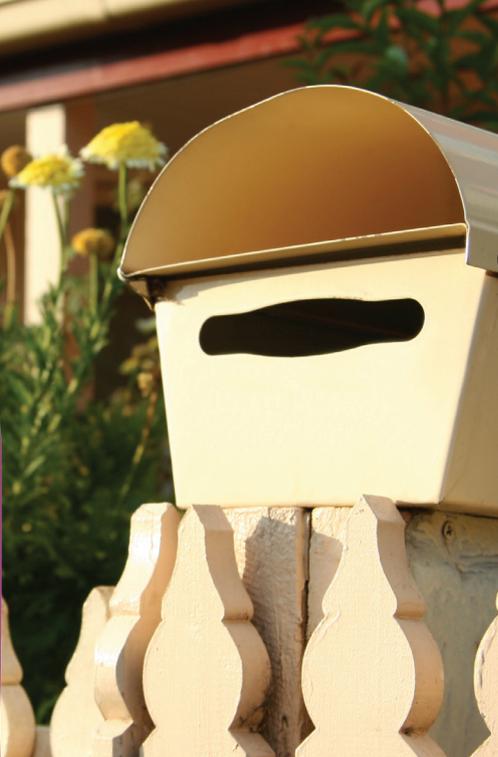

POSTS



UPRIGHTS



LETTER BOXES



CLOTHES LINES



POSTS



UPRIGHTS



LETTER BOXES



CLOTHES LINES

plus other non-structural applications

## COVERAGE

Approximately 2 x 20kg bags per post hole.

## HOW MUCH DO I NEED?

Visit [cementaustralia.com.au/calculators](http://cementaustralia.com.au/calculators) to use our handy product calculator to work out how much Rapid Set Concrete you need for your project.

## LIMITATIONS

Rapid Set Concrete is not designed for use in any structural application. Extreme temperatures will impact set time of Rapid Set Concrete.

To view all product limitations, storage & handling tips please visit [cementaustralia.com.au](http://cementaustralia.com.au)

Cement Australia Rapid Set Concrete is manufactured using cement, sand and selected aggregates and additives and is formulated to harden rapidly without mixing.

Rapid Set Concrete is designed for use in fixing fence and pergola posts and is ideal for permanently securing clothes lines and letter boxes and numerous other uses around the home and garden, as well as various similar commercial applications.

## HOW TO USE



**STEP 1** Place the post or pole in the hole and provide support so that it does not fall over.

Note: the hole in which the pole will be placed should be pre-wet to limit the absorption of the water into which the Rapid Set Concrete is to be poured. Sandy and/or fast draining soils may require a plastic lining to prevent seepage of water into the ground.



**STEP 2** Measure the correct amount of water as per bag instructions and pour in the hole.



**STEP 3** Pour the bag of Rapid Set Concrete making sure it is evenly distributed around the post or pole without delay.

Supports may be removed after 1 hour, depending on the ambient temperature. It is advisable to test the stability of the post before removing the supports.

**OPTIONAL METHOD** Pour in half the bag of Rapid Set Concrete into the pre-wetted hold. Add water as per Step 2. Tamp the product with a rod or stick. Add the remaining product and tamp again.

Item Code 14049

Cement Australia  
Rapid Set Concrete 20kg



9 311808 031624

### PRODUCT DISCLAIMER

Recommendations regarding the use of this product are to be taken as a guide only. If in doubt contact Cement Australia Pty Limited ("Cement Australia") or seek professional advice. To the extent permitted by law, Cement Australia excludes all implied warranties, conditions and guarantees imposed by legislation. Cement Australia excludes all liability for loss, damage or injury arising from use of the product (i) otherwise than in accordance with the recommendations or (ii) for purposes other than those for which it is ordinarily acquired. For all other loss, damage or injury arising from the use of this product, to the extent permitted by law Cement Australia's liability is limited, at its discretion, to refunding the cost of the product or resupplying the product or equivalent product.

MADE  
Right Here

CEMENT  
AUSTRALIA®